

EXHIBIT G



CMI-EQUIPMENT & ENGINEERING, INC.

533 N. Court St. • P.O. Box 647 AuGres, MI 48703

A SUBSIDIARY OF CMI INTERNATIONAL INC.

[517] 876-7161
Fax [517] 876-7162

CMI-EQUIPMENT AND ENGINEERING, INC.

INSTRUCTION MANUAL

CMI-EQUIPMENT AND ENGINEERING SERIAL 9895-3-9

11.0 SAFETY PROCEDURES

- 11.1 Do not turn on main power until all personnel are clear of the machine.
- 11.2 Make sure safety bars are in position when lower strip table is up and machine is not in cycle.
- 11.3 Do not attempt to make adjustments or repairs while the machine is cycling.
- 11.4 Do not cycle the machine by manual overrides of solenoid valves, unless operation is properly supervised.
- 11.5 Check the machine readiness before starting up.
- 11.6 Do not get inside machine to make any adjustments until the manual lockout valve is locked out.